


Serenity Progressive Pull Out Kitchen Set

Nero




Lead Free

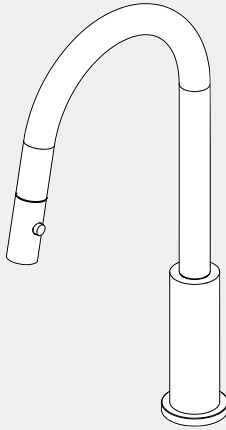

Versions:202412

Drawing

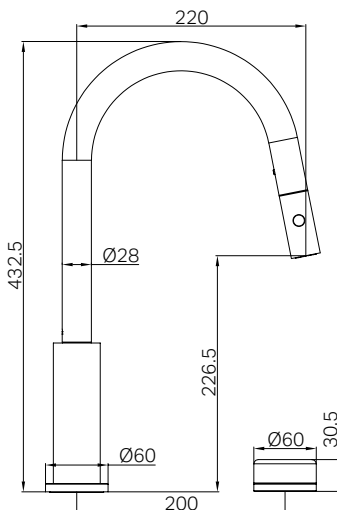

Specifications

Watermark License

WM-060073

Temperature Rating

Min 1°C-Max 75°C

Pressure Rating

Min 150kpa - Max 500kpa

Packaging Includes

- 1x Spout
- 1x Handwheel
- 1x Aerator Spanner
- 1x Inlet body
- 1x Stabilizer
- 1x Quick Connecting Hose
- 2x Flexible Hoses
- 1x Counter Weight
- 1x Installation Kits

*Dimensions are nominal measurements only.



Chrome



Gun Metal



Brushed Bronze



Matte Black



Brushed Gold



Brushed Nickel

Serenity Progressive Pull Out Kitchen Set With Carrara Handle

24E055BZ/ 24E055BG / 24E055BN/24E055GM / 24E055MB / 24E055CH

Serenity Progressive Pull Out Kitchen Set With Verde Alpi Handle

24E056BZ/ 24E056BG / 24E056BN/24E056GM / 24E056MB / 24E056CH

Serenity Progressive Pull Out Kitchen Set With Rome Travertine Handle

24E057BZ/ 24E057BG / 24E057BN/24E057GM / 24E057MB / 24E057CH

Serenity Progressive Pull Out Kitchen Set With Arabescato Corchia Handle

24E058BZ/ 24E058BG / 24E058BN/24E058GM / 24E058MB / 24E058CH

Serenity Progressive Pull Out Kitchen Set With Calacatta Viola Handle

24E059BZ/ 24E059BG / 24E059BN/24E059GM / 24E059MB / 24E059CH

Serenity Progressive Pull Out Kitchen Set With Metal Handle

24E060BZ/ 24E060BG / 24E060BN/24E060GM / 24E060MB / 24E060CH

Serenity Progressive Pull Out Kitchen Set With Marquina Black Handle

24E137BZ/ 24E137BG / 24E137BN/24E137GM / 24E137MB / 24E137CH

Installation Instruction

GENERAL INSTRUCTIONS:

- This product must be installed by a licensed plumber. Ensure that the installation complies with the Australian/New Zealand Standard AS/NZS 3500.
- All pipework must be thoroughly flushed prior to the installation of the mixer. In-line filters must be fitted on both hot and cold supplies to prevent foreign particles from damaging the ceramic cartridge.
- All outlets used primarily for personal hygiene must deliver water at a safe temperature in accordance with regional regulations.

NOTE:


- Do not hydrostatic test the installation with this mixer installed. Damage to the ceramic cartridge may occur.
- Do not remove the ceramic cartridge from the mixer when installing.
- After installation, all connections must be checked for leaks.
- This mixer is not recommended for use in uncontrolled heating systems such as wet-backs or solar heating units unless a suitable tempering valve is fitted.
- If limited water flow is experienced, locate aerator and filter washers and clean away foreign material as required.
- It is the responsibility of the plumber to ensure a waterproof seal is achieved between the product and mounting surface. If in doubt about the quality of the seal, remove the product and reinstall.


MAINTENANCE AND CARE:

- Regularly check the mixer and connections for signs of wear or leaks.
- Clean the tap with mild soapy water to maintain its appearance, avoiding harsh chemicals and abrasive materials that may damage the finish.


FINAL INSPECTION:

- Ensure the tap operates smoothly and that there are no leaks at the connections.
- Clean the area and the newly installed tap with a soft cloth to remove any installation residues.

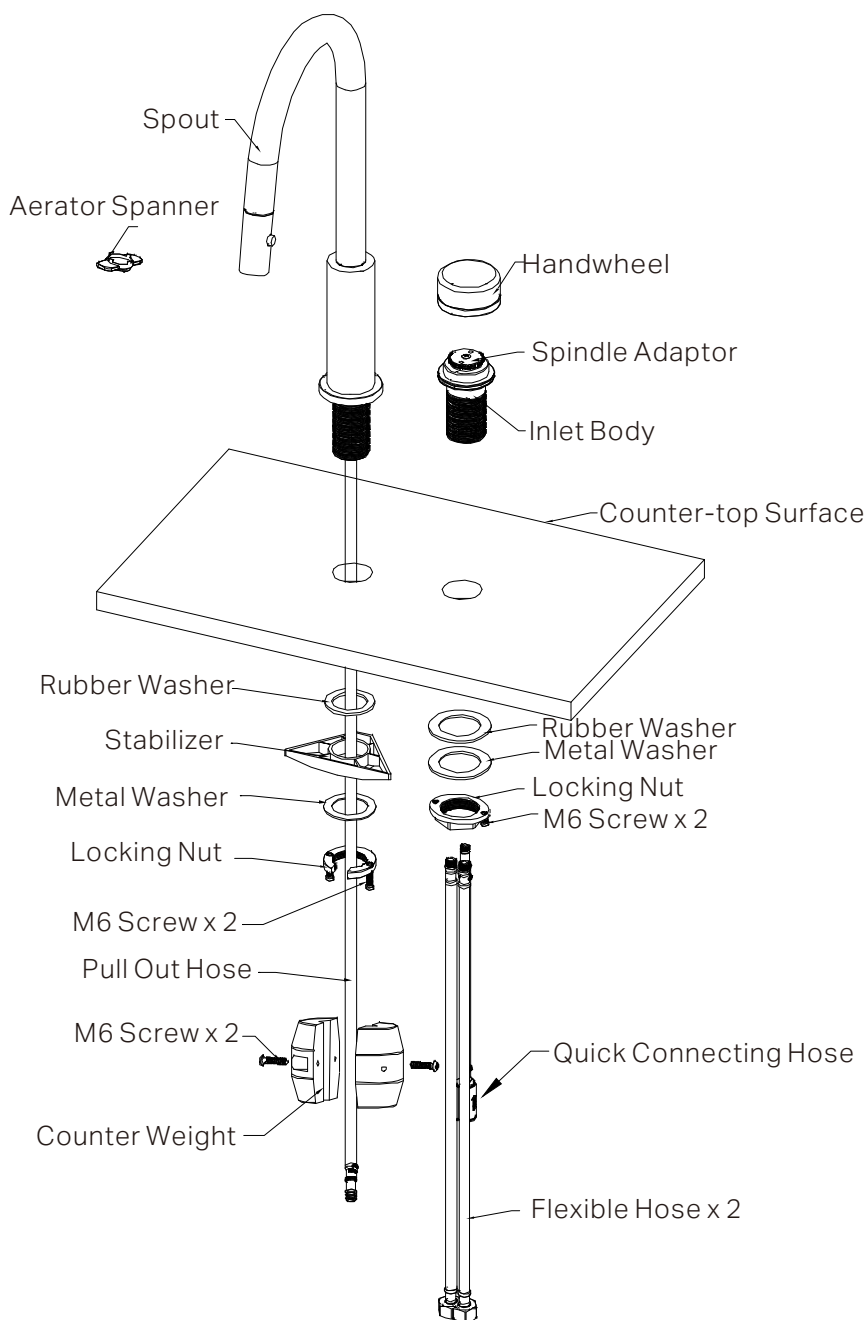

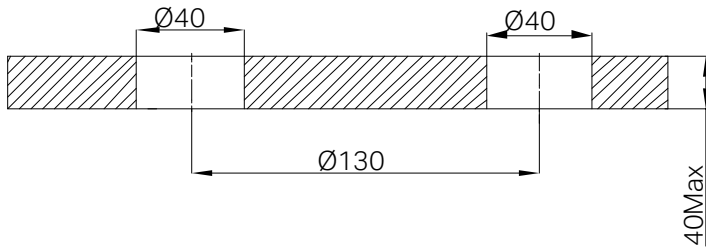


1. Ensure the counter-top has the correct hole dimensions as specified in the diagram, with a maximum thickness of 40mm.

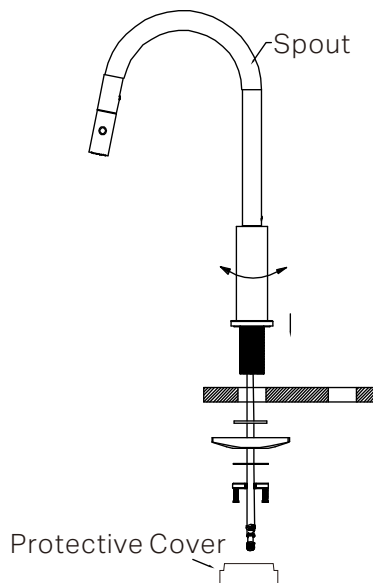


2. Take off the protective cover.

Place the spout and pass the pull out hose through the hole in the left side of the counter-top and install the rubber washer and the metal washer, if a stabilizer is required, install the stabilizer after positioning the rubber washer. Tighten the locking nut securely with the two M6 screws to ensure the mixer is firmly attached to the counter-top.

Avoid over tightening to prevent damage to the components.

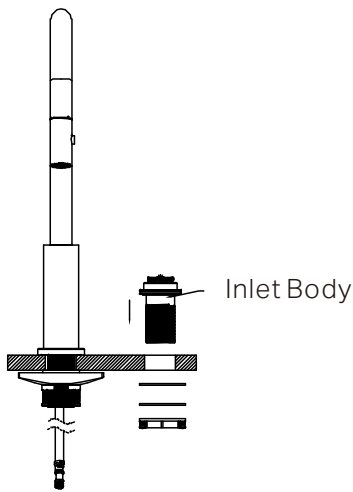

3. Remove the locking nut, the metal washer and the rubber washer from the inlet body. Insert the inlet body through the hole on the right side of the counter-top and install the rubber washer and the metal washer, tighten the locking nut securely with the two M6 screws to ensure the inlet body is firmly attached to the counter-top.

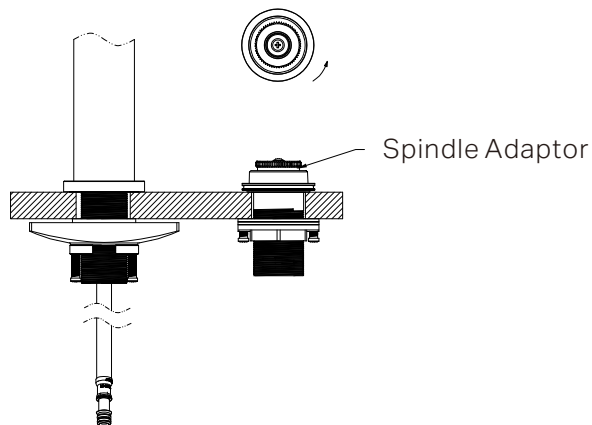


4. Apply lubrication evenly to the O-Ring. Refer to the diagram to identify the correct O-Ring position. Ensure the O-Ring is well-lubricated to prevent damage during installation.

For Metal Handwheels:

Rotate the spindle adaptor counterclockwise to its fully closed position. Refer to the diagram for clarification.

For Marble Handwheels:

No adjustment to the spindle adaptor is necessary.

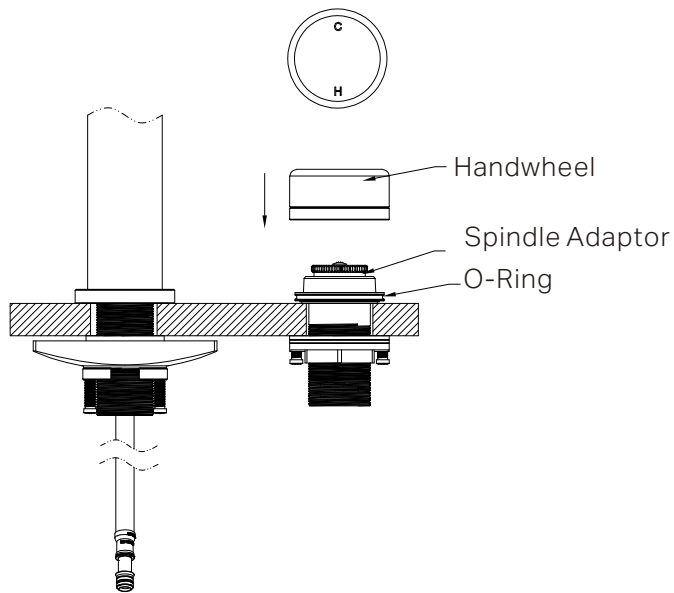


5. Align the Handwheel with the Spindle Adaptor:

Ensure the teeth on the underside of the handwheel align perfectly with the gears on the spindle adaptor. This alignment is crucial for proper functionality. Secure the Handwheel:


Once aligned, press the handwheel down firmly onto the spindle adaptor.

Tip:


For metal handwheels, ensure the handwheel installed as shown in above on the diagram.

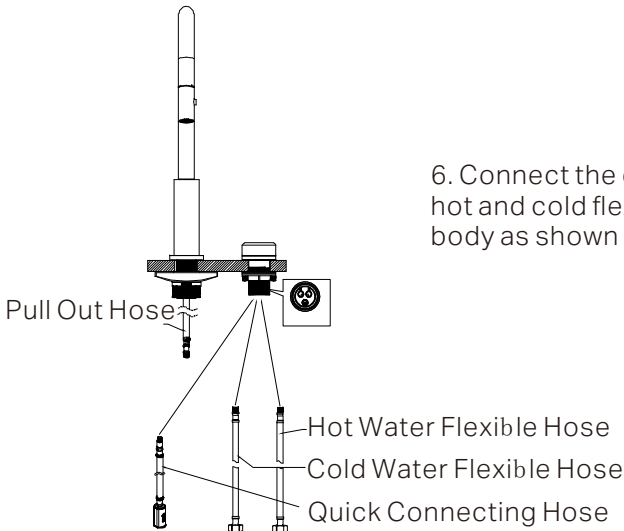

6. Connect the quick connecting hose, hot and cold flexible hoses to the inlet body as shown in above image.

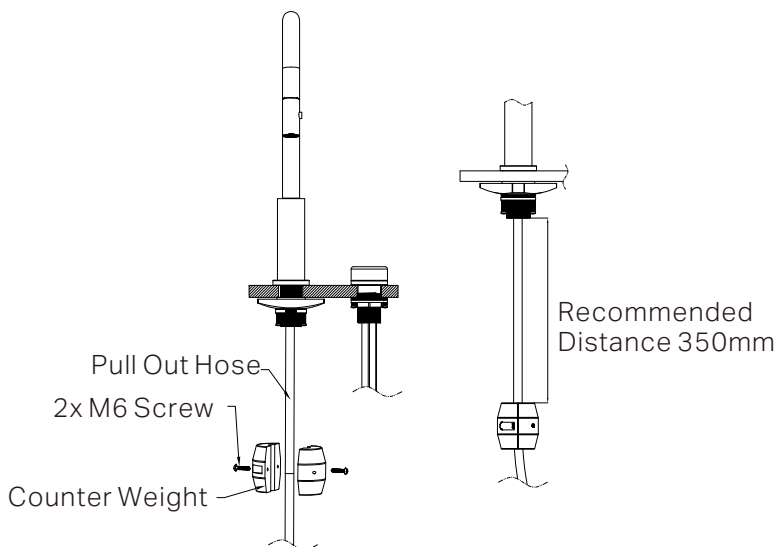

7. Install counterweight by tightening the screws, please note that the distance from counter weight to thread of inlet body is 350mm, as shown in above diagram.

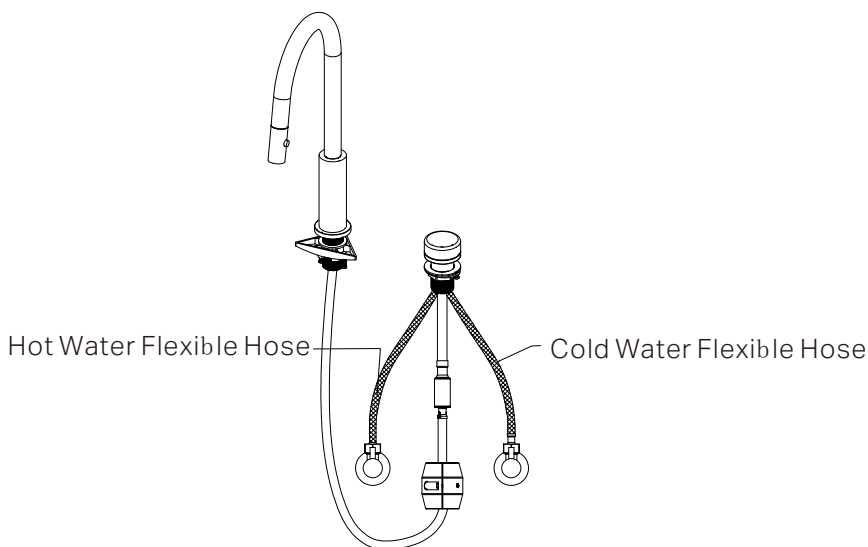

8. Connect the quick connecting hose to the pull out hose.
Connect the inlet flexible hoses to the corresponding hot and cold water supply valves. Tighten the female cone nuts by hand (according to flexible hose instruction), ensuring they are secure yet not overtightened to avoid thread damage.

9. Turn on the drainage system and water supply, and inspect all connections for any signs of leakage.

Note: If you bought marble handwheel products, there are no hot/cold markings are applied to the handwheel.

3170861

Nero



Lead Free

