Serenity Wall Basin Set 160/185/220mm Offset Spout

Nero

Lead Free

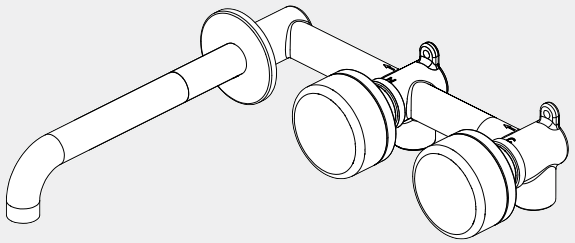

Versions:202412

Drawing

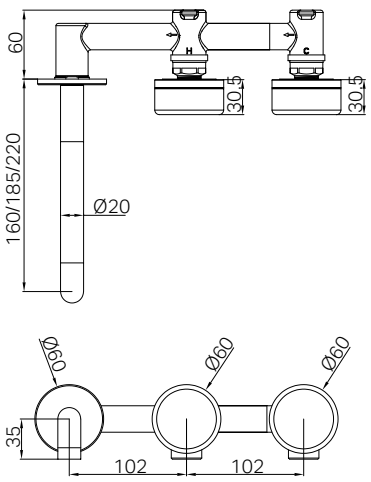

Specifications

Watermark License
WM-060073

Temperature Rating
Min 1˚C-Max 75˚C

Pressure Rating
Min 150kpa - Max 500kpa

Group Item

1 x Serenity Wall Basin Set Offset Spout Body Only, SKU:24C021
1 x Serenity Wall Basin Set 160/185/220mm Offset Spout Trim Kits Only

*This product is packaged separately.

*Dimensions are nominal measurements only
**Includes an additional non-restricting aerator for bath use

Chrome

Gun Metal

Brushed Bronze

Matte Black

Brushed Gold

Brushed Nickel

Serenity Wall Basin Set 160mm Offset Spout With Carrara Handle
24D053BZ/ 24D053BG / 24D053BN/24D053GM / 24D053MB / 24D053CH
Serenity Wall Basin Set 160mm Offset Spout With Verde Alpi Handle
24D054BZ/ 24D054BG / 24D054BN/24D054GM / 24D054MB / 24D054CH
Serenity Wall Basin Set 160mm Offset Spout With Rome Travertine Handle
24D055BZ/ 24D055BG / 24D055BN/24D055GM / 24D055MB / 24D055CH
Serenity Wall Basin Set 160mm Offset Spout With Arabescato Corchia Handle
24D056BZ/ 24D056BG / 24D056BN/24D056GM / 24D056MB / 24D056CH
Serenity Wall Basin Set 160mm Offset Spout With Calacatta Viola Handle
24D057BZ/ 24D057BG / 24D057BN/24D057GM / 24D057MB / 24D057CH
Serenity Wall Basin Set 160mm Offset Spout With Metal Handle
24D058BZ/ 24D058BG / 24D058BN/24D058GM / 24D058MB / 24D058CH
Serenity Wall Basin Set 160mm Offset Spout With Marquina Black Handle
24D124BZ/ 24D124BG / 24D124BN/24D124GM / 24D124MB / 24D124CH

Serenity Wall Basin Set 185mm Offset Spout With Carrara Handle
24D059BZ/ 24D059BG / 24D059BN/24D059GM / 24D059MB / 24D059CH
Serenity Wall Basin Set 185mm Offset Spout With Verde Alpi Handle
24D060BZ/ 24D060BG / 24D060BN/24D060GM / 24D060MB / 24D060CH
Serenity Wall Basin Set 185mm Offset Spout With Rome Travertine Handle
24D061BZ/ 24D061BG / 24D061BN/24D061GM / 24D061MB / 24D061CH
Serenity Wall Basin Set 185mm Offset Spout With Arabescato Corchia Handle
24D062BZ/ 24D062BG / 24D062BN/24D062GM / 24D062MB / 24D062CH
Serenity Wall Basin Set 185mm Offset Spout With Calacatta Viola Handle
24D063BZ/ 24D063BG / 24D063BN/24D063GM / 24D063MB / 24D063CH
Serenity Wall Basin Set 185mm Offset Spout With Metal Handle
24D064BZ/ 24D064BG / 24D064BN/24D064GM / 24D064MB / 24D064CH
Serenity Wall Basin Set 185mm Offset Spout With Marquina Black Handle
24D125BZ/ 24D125BG / 24D125BN/24D125GM / 24D125MB / 24D125CH

Serenity Wall Basin Set 220mm Offset Spout With Carrara Handle
24D065BZ/ 24D065BG / 24D065BN/24D065GM / 24D065MB / 24D065CH
Serenity Wall Basin Set 220mm Offset Spout With Verde Alpi Handle
24D066BZ/ 24D066BG / 24D066BN/24D066GM / 24D066MB / 24D066CH
Serenity Wall Basin Set 220mm Offset Spout With Rome Travertine Handle
24D067BZ/ 24D067BG / 24D067BN/24D067GM / 24D067MB / 24D067CH
Serenity Wall Basin Set 220mm Offset Spout With Arabescato Corchia Handle
24D068BZ/ 24D068BG / 24D068BN/24D068GM / 24D068MB / 24D068CH
Serenity Wall Basin Set 220mm Offset Spout With Calacatta Viola Handle
24D069BZ/ 24D069BG / 24D069BN/24D069GM / 24D069MB / 24D069CH
Serenity Wall Basin Set 220mm Offset Spout With Metal Handle
24D070BZ/ 24D070BG / 24D070BN/24D070GM / 24D070MB / 24D070CH
Serenity Wall Basin Set 220mm Offset Spout With Marquina Black Handle
24D126BZ/ 24D126BG / 24D126BN/24D126GM / 24D126MB / 24D126CH

GENERAL INSTRUCTIONS:

- This product must be installed by a licensed plumber. Ensure that the installation complies with the Australian/New Zealand Standard AS/NZS 3500.
- All pipework must be thoroughly flushed prior to the installation of the mixer. In-line filters must be fitted on both hot and cold supplies to prevent foreign particles from damaging the ceramic cartridge.
- All outlets used primarily for personal hygiene must deliver water at a safe temperature in accordance with regional regulations.

NOTE:

- Do not hydrostatic test the installation with this mixer installed. Damage to the ceramic cartridge may occur.
- Do not remove the ceramic cartridge from the mixer when installing.
- After installation, all connections must be checked for leaks.
- This mixer is not recommended for use in uncontrolled heating systems such as wet-backs or solar heating units unless a suitable tempering valve is fitted.
- If limited water flow is experienced, locate aerator and filter washers and clean away foreign material as required.
- It is the responsibility of the plumber to ensure a waterproof seal is achieved between the product and mounting surface. If in doubt about the quality of the seal, remove the product and reinstall.

MAINTENANCE AND CARE:

- Regularly check the mixer and connections for signs of wear or leaks.
- Clean the tap with mild soapy water to maintain its appearance, avoiding harsh chemicals and abrasive materials that may damage the finish.

FINAL INSPECTION:

- Ensure the tap operates smoothly and that there are no leaks at the connections.
- Clean the area and the newly installed tap with a soft cloth to remove any installation residues.

Installation Instruction For Body

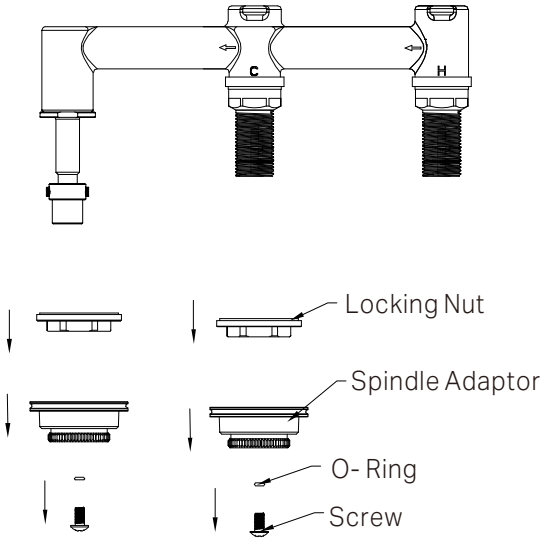

1. Remove the components from spindle as shown in the provided diagram. Ensure all parts are removed gently to avoid damage to the components or threads.

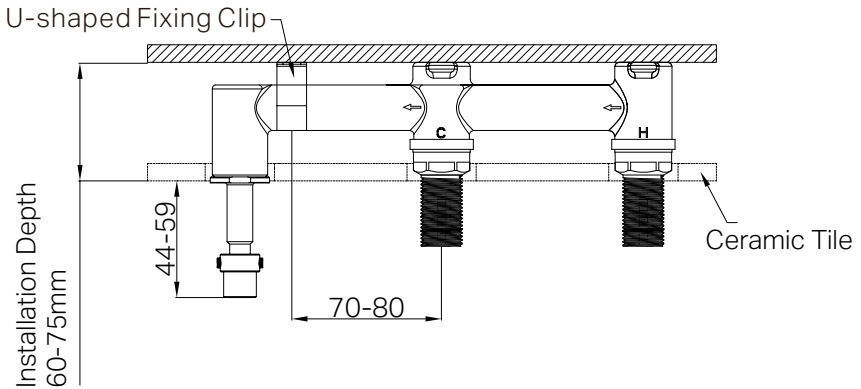

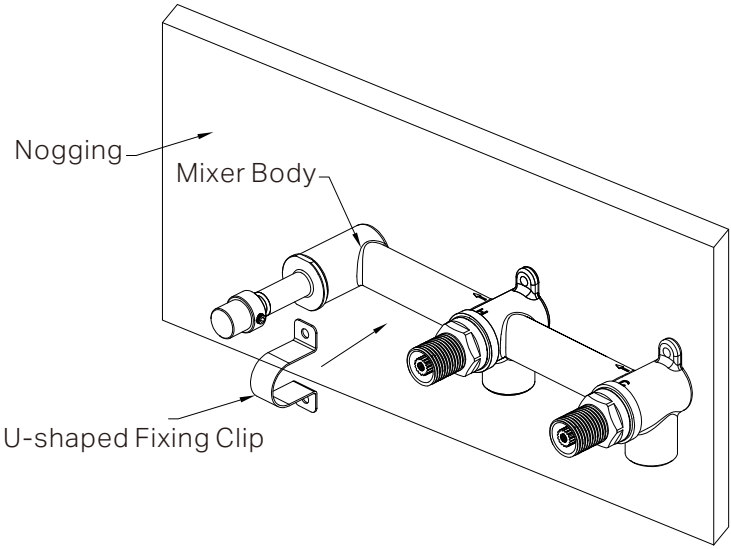

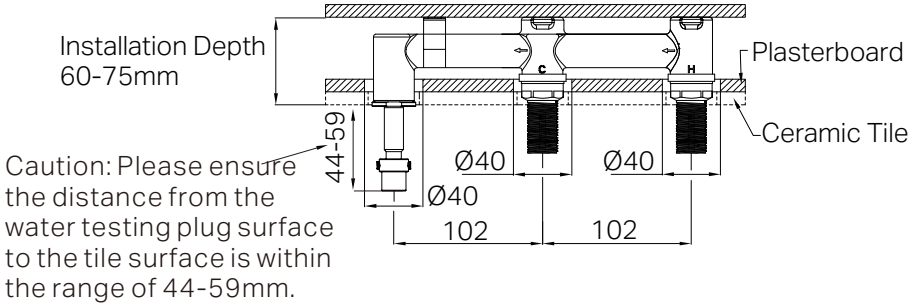

2. Position the mixer body against the nogging and secure it firmly. Ensure the installation depth is 60–75mm from the nogging to the ceramic tile.
Note: The U-shaped fixing clip must be used to secure the main body. Install the U-shaped clip at a distance of 70–80mm from the center of the main body to ensure it remains stable and does not move.
3. Connect the cold and hot water supply lines and perform a leak test.
4. Drill three Ø40mm holes in the plasterboard as shown in the diagram.

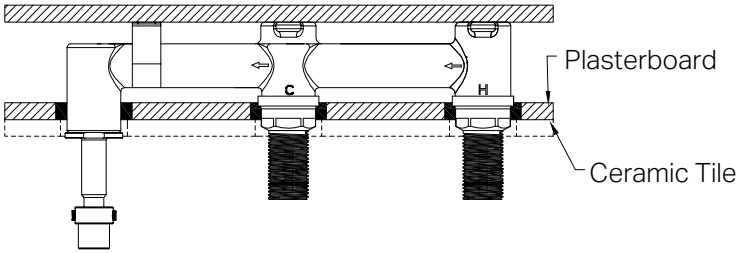

5. Install plasterboard and waterproof the gap between the mixer body and plasterboard.

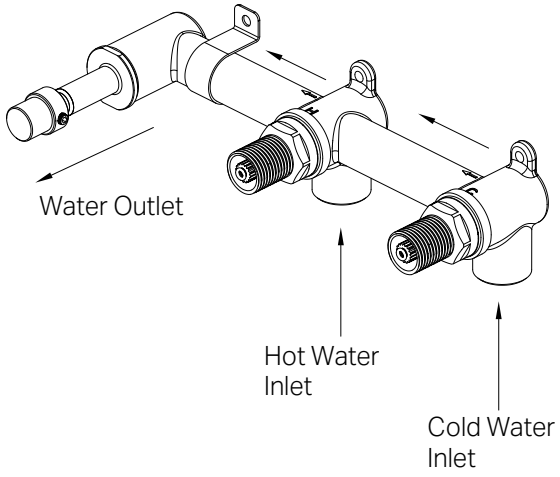

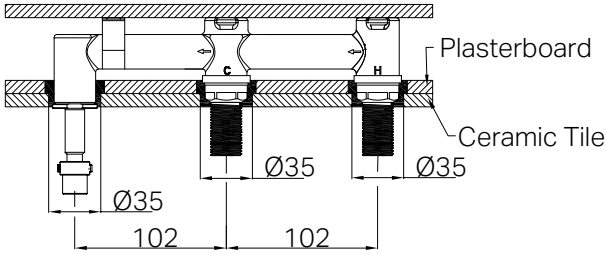

6. Drill three Ø35mm holes in the ceramic tile aligned with the plasterboard cutouts.
7. Position the ceramic tile precisely and waterproof the junction between the mixer body.

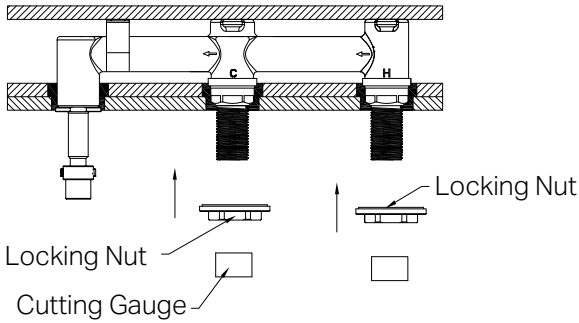

8. Reattach the locking nuts onto the spindle.
Note: Use the provided washers to achieve a secure and watertight connection.
Attach the gauges to the spindle.

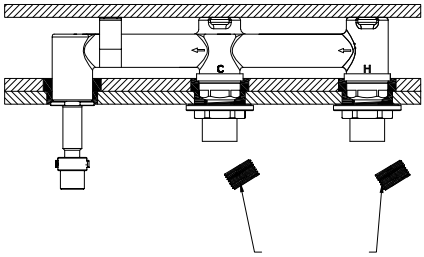

Trim any excess thread

9. Trim any excess thread. Remove the gauges after this step.

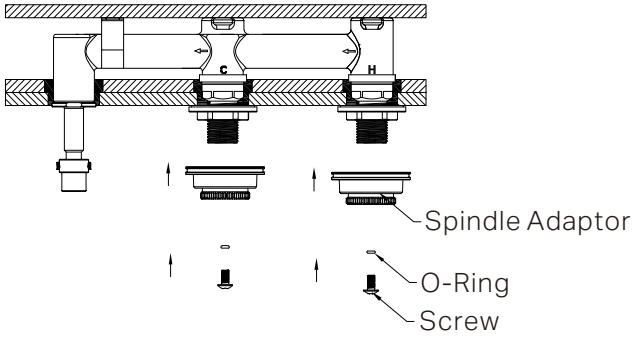

10. Install the spindle adaptors onto the spindles. Tighten the spindle adaptors securely using screws, ensuring that O-rings are properly seated.

Installation Instruction
For Trim Kits Only

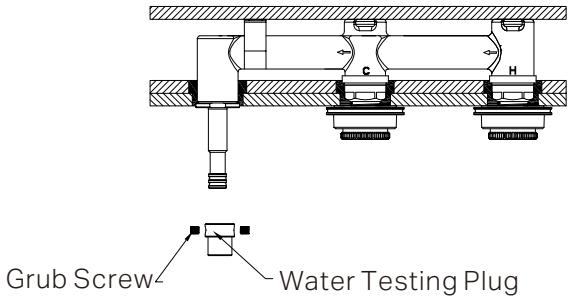

1. Release the grub screws to remove the water testing plug.

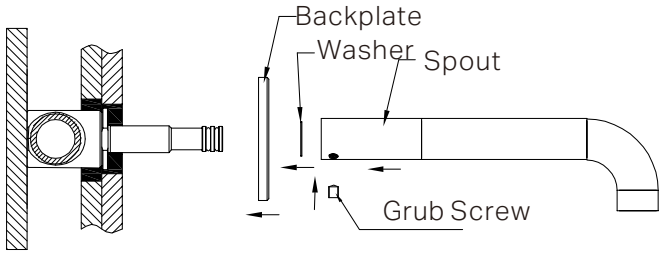

2. Slide the backplate and washer onto the wall. Ensure the spout is aligned and secure it firmly using the supplied grub screw.

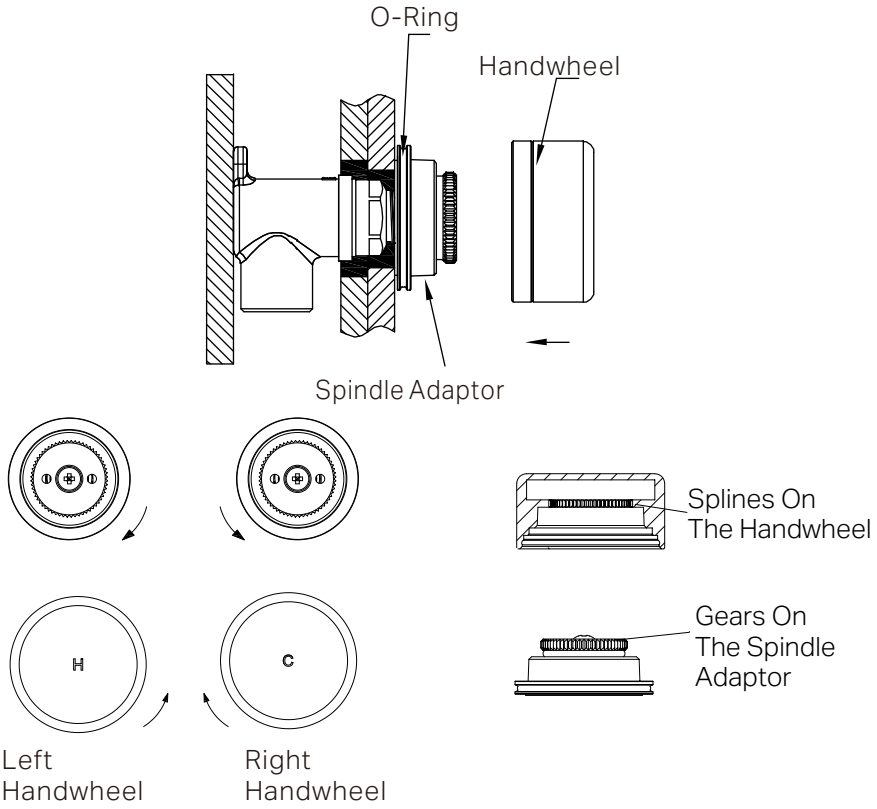

3. Apply lubrication evenly to the O-Ring. Refer to the diagram to identify the correct O-Ring position. Ensure the O-Ring is well-lubricated to prevent damage during installation.
For Metal Handwheels:
Rotate the left spindle adaptor clockwise to its fully closed position.
Rotate the right spindle adaptor counterclockwise to its fully closed position.
Refer to the diagram for clarification.
For Marble Handwheels:
No adjustment to the spindle adaptor is necessary.
Align the Handwheel with the Spindle Adaptor:
Ensure the spline on the underside of the handwheel align perfectly with the gears on the spindle adaptor, as shown in the above diagram.
This alignment is crucial for proper functionality.
Secure the Handwheel:
Once aligned, press the handwheel down firmly onto the spindle adaptor.
Tip:
For metal handwheels, ensure the handwheel marked "H" is installed on the left side and the handwheel marked "C" is installed on the right side.

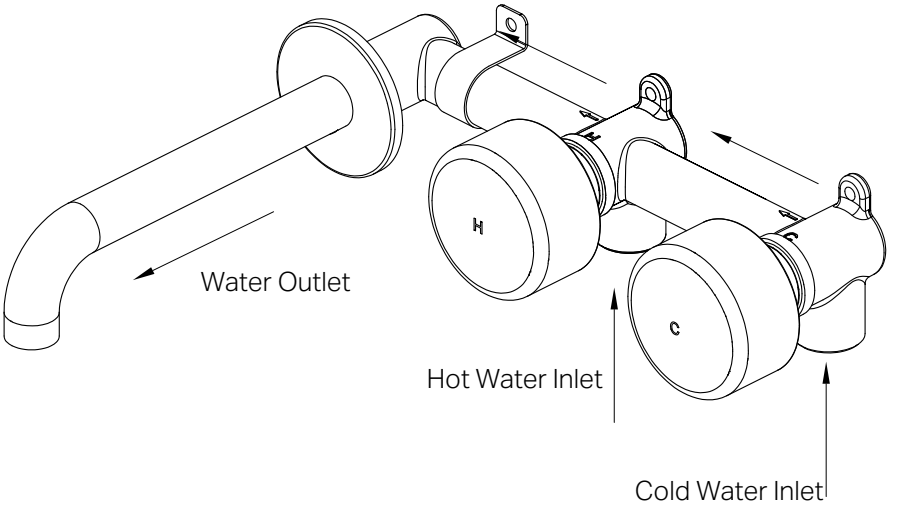

4. Turn on the drainage system and water supply, and inspect all connections for any signs of leakage.
Note: If you bought marble handwheel product, there are no hot/cold markings are applied to the handwheels.

Nero

WATER RATING
www.waterrating.gov.au
5.0 litres per minute
Licence No. 1225

Pb
Lead Free

25 YEARS WARRANTY
25
25 YEARS WARRANTY