


ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER PRIOR TO INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

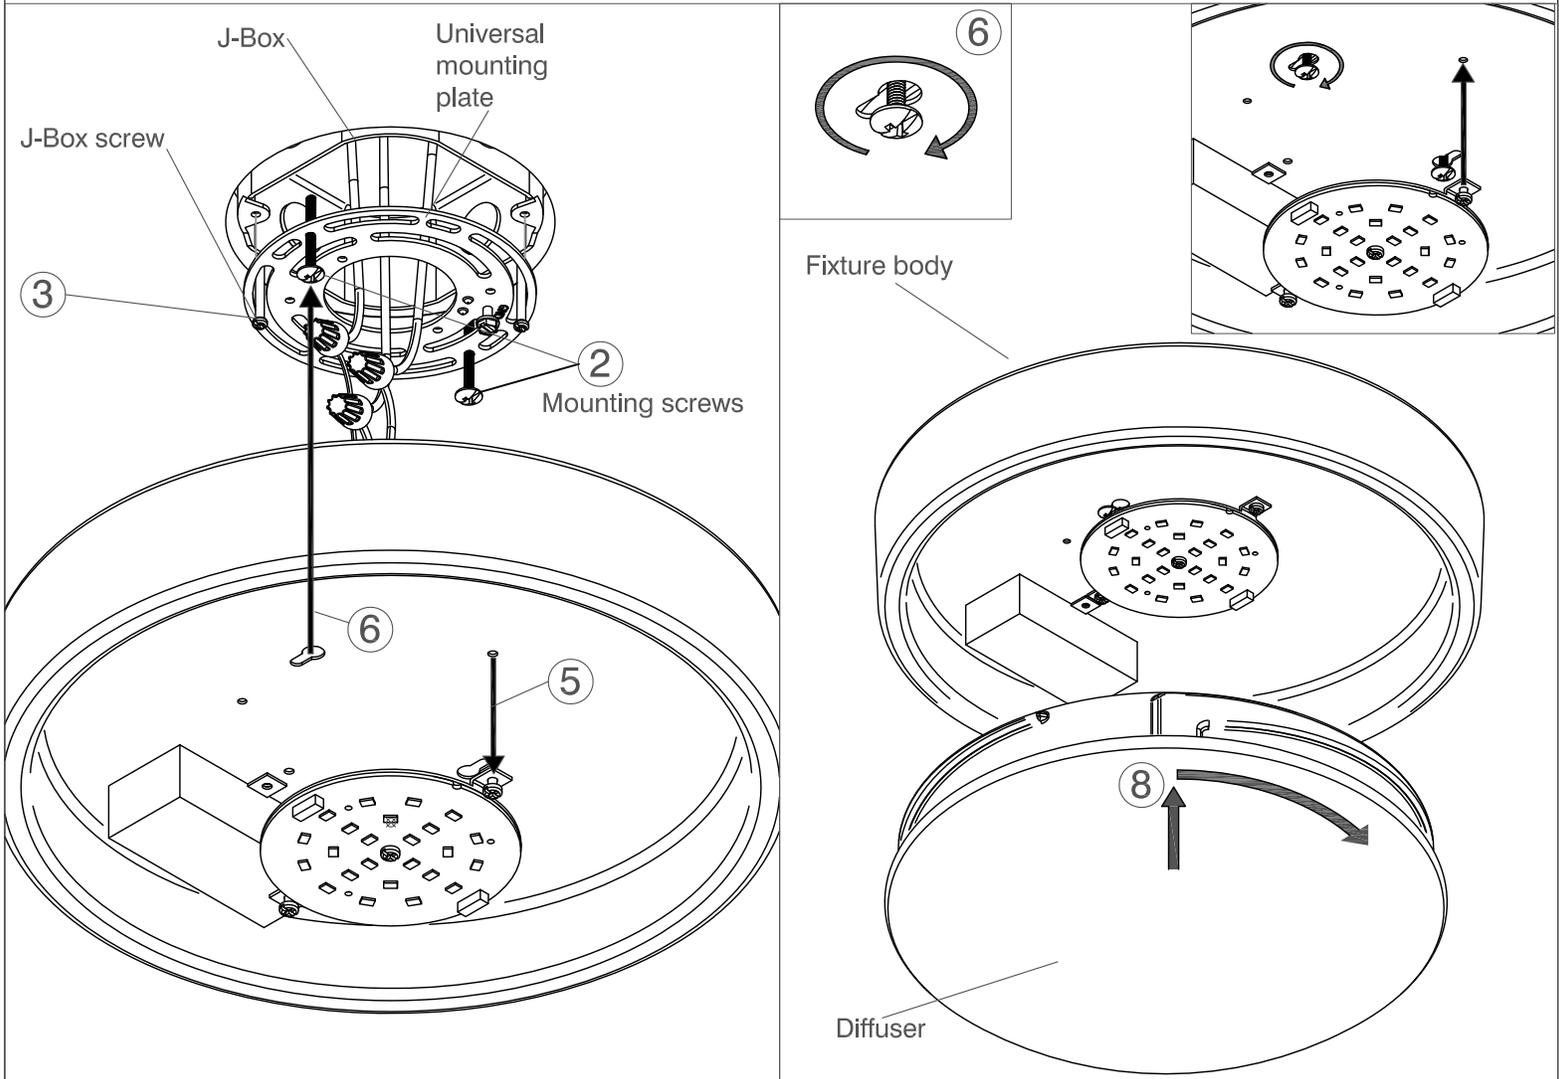

Installation Steps

- Carefully unpack your new fixture and lay out all the parts on clean asurface. Take care not to lose any small parts necessary for installation.
- Install mounting screws to the outer threaded holes of the universal mounting plate loose like shown.
- Install universal mounting plate to j-box securely with j-box screws.
- Make wire connections: Attach ground wire to building ground wire using a wire nut or attach them to the mounting plate with a green ground screw.
 - **FOR DIMMING:** If using a dimmer (not included), follow wiring instructions enclosed with dimmer. Double check wiring. Tuck the wire connections neatly into the junction box.
 - **FOR NON-DIMMING:** If not using a dimming switch, with wire nuts, cap off purple and gray wires individually. Wire positive wire with positive wire, negative wire with negative wire. Double check wiring. Tuck the wire connections neatly into the junction box.
- Remove the two screws holding the LED stand. Do not remove LED, screw on LED board, or LED wires from LED board.
- Install fixture body to universal mounting plate by guiding fixture key slot holes over the two mounting screws from step two. Turn the fixture to lock in the screw to help keep the fixture from falling while the screws are tightened. Tighten screws until the fixture is secure against the ceiling and cannot be turned easily.
- Replace LED stand and tighten screws.
- Install diffuser by carefully lifting glass into fixture, and turning until it stops. Fixture should not move. If fixture moves, check and repeat step 5 through 7. If secure, restore power.

OXYGEN LIGHTING ©

Journey Ceiling mount
 120v **3-622-xx**
 277v **37-622-xx**

oxygen

OXYGEN LIGHTING
 201 RAILHEAD RD, FORT WORTH, TX 76106
 TEL. (877) 607-0202 FAX (877) 607-0203
 WWW.OXYGENLIGHTING.COM

ASSEMBLY INSTRUCTIONS