

Shackle Pin Swivel Lanyard

Installation and Usage Instructions

85541 (Rev. A)

Please read instructions carefully and fully before installation and/or usage.

IMPORTANT NOTES

- For shackles with pins with eyes only
- Pin Weight Limits: 20 lbs
- For use on pins 6" to 13" in length
- Use a swaging tool with the 1/8" setting and crimp 3 times along the length of the ferrules

NECESSARY PARTS


- 1 Assembly: 2 Crimped ferrules to swivel cup with extra length of cable
- 4 ea. uninstalled ferrules
- 1 ea. 10" long cable (uninstalled) for shackle pin anchor point

SWAG18-SHKL- 1/8" Crimp Tool (Not Included)

WARNINGS



ALWAYS WEAR APPROPRIATE PROTECTIVE EQUIPMENT. DO NOT USE THIS PRODUCT ON OR NEAR ROTATING EQUIPMENT. IMPROPER USE COULD RESULT IN DEATH OR DISMEMBERMENT. IF ANY CRACKS, RIPS OR TEARS NOTED, PRODUCT REPLACEMENT IS REQUIRED.

1 Attach the shackle pin eye to the swivel cup by using the small length of cable and 2 ferrules. Be sure to feed the cable through the swivel ring prior to compressing the ferrules.

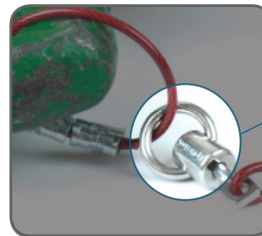

SWIVEL RING CONNECTION

2 Using the excess portion of cable that is pre-installed onto the swivel cup, temporarily install the cable using 2 ferrules by forming a loop around the shackle body the same way. Be sure the loop created is not larger than the shackle shoulder which would allow it to slide off. Allow only enough cable length for the swivel to function properly and trim any excess length not needed in the assembly.

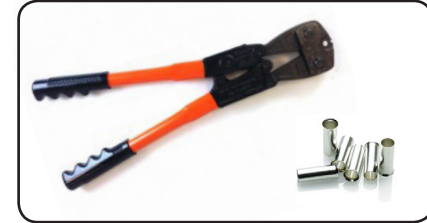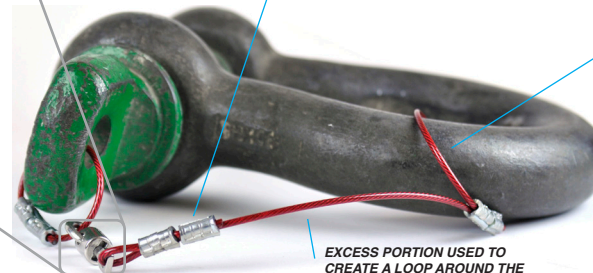

3 Once in position and assuring the cable is taught but can still rotate around the body and can't be removed from the shackle, crimp the ferrules in place and cut the excess cable from both ferrules. Test all connections for integrity prior to use.

INSTALLATION



Ty-Flot, Inc. • 305 Massabesic Street • Manchester, NH 03103
www.ty-flot.com • Phone: 603-669-5169 • Fax: 603-669-5113

THE DROP STOPS HERE