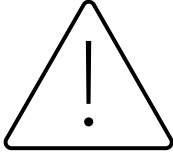


FOCLNR-STK50-AO – Optical Transceiver Cleaning Sticks Instruction Manual

Thank you for choosing the FOCLNR-STK50-AO which is designed to clean LC connector compliant transceivers. Carefully read this instruction manual before using this device. Please keep this instruction manual for future reference.

A. Safety Precautions

	FOCLNR-STK50-AO are designed to clean LC compliant transceivers.
	Though cleaning sticks are deemed safe, improper usage or handling can still inflict injury to others.

B. Notes on Usage

- Do not re-use transceiver cleaning sticks
- Do not touch the tip of the cleaning stick
- Replacement cleaning sticks (x50) can be reordered with part number: FOCLNR-STK50-AO

C. Notes on Storage

- FOCLNR-STK50-AO must be stored in the shipping tray away from high heat and high humidity

D. Device Components

- FOCLNR-STK50-AO – Optical transceiver cleaning sticks



E. Applications

- Cleaning Application
 1. Remove dust plug from optical transceiver
 2. Remove an optical transceiver cleaning stick from the storage tray
 3. Insert cleaning stick into LC receptacle until the tip touches the surface
 4. Remove cleaning stick from optical transceiver
 5. Using a new cleaning stick from the storage, repeat with the other LC receptacle

