
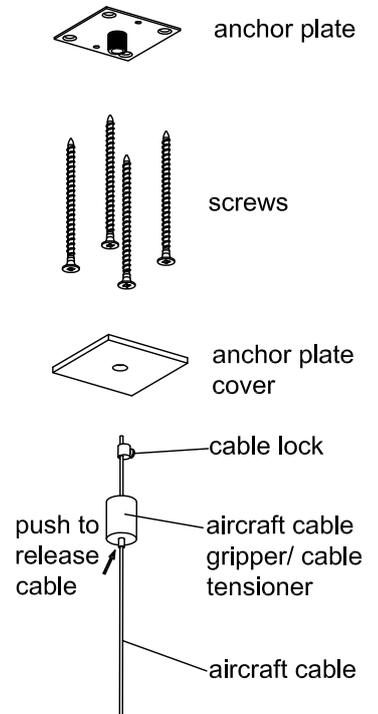


# ASSEMBLY AND INSTALLATION INSTRUCTIONS

**WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER PRIOR TO INSTALLING OR SERVICING THIS FIXTURE.**

**NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.**

PLEASE READ ENTIRELY THROUGH INSTALLATION BEFORE BEGINNING

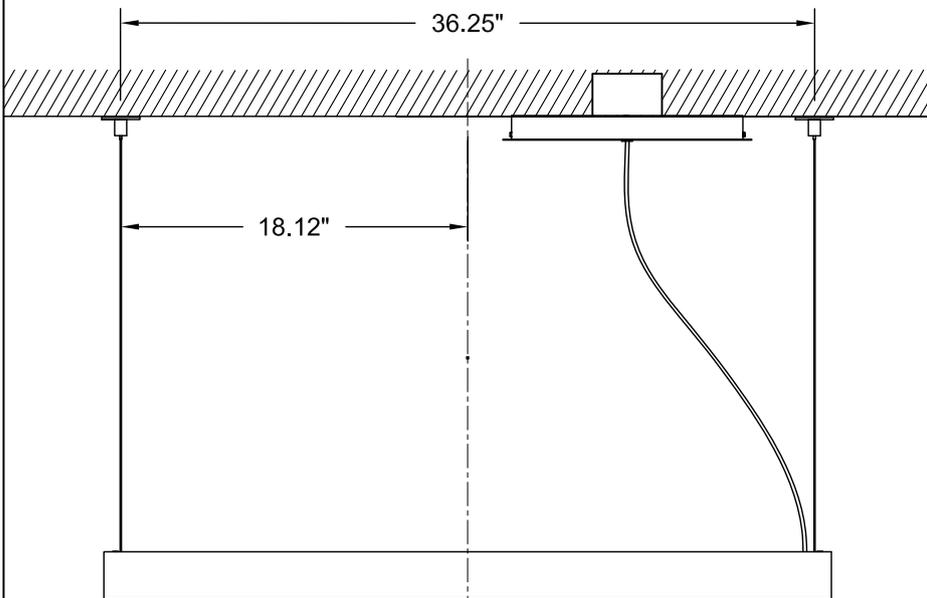

## Installation Steps

1. Anchor plates must be mounted directly to building structure. Failure to properly install anchor plates to building structure may cause injury.
2. Locate mounting locations. Anchor mounts will be 36.25" apart. See illustration.
3. Determine final location of fixture, making sure the anchor mount locations will be secured to building structure.
4. Hold fixture to ceiling above its final hanging location, and lightly mark ceiling where the ends of the fixture are. Measure and mark the center between those two marks (only if the fixture will not be centered under the J-Box).
5. To determine location of anchor mounts: From the center mark or center of J-Box (if J-Box is centered over fixture), measure and mark 18.125" towards one end of fixture marks and then the other. Total distance between the new marks should be 36.25". If not, measure again and remark.
6. Mount anchor plates to building structure centered over the 18.125" marks.
7. Verify length of aircraft cable needed, and cut cable to the desired length.
8. Guide aircraft cable through cable gripper/cable tensioner.
9. Install cable lock near end of cable, with .25" of excess cable showing. **IMPORTANT:** Make sure cable lock is properly secured on the cable.
10. Depress small center tube on cable gripper/cable tensioner, and pull aircraft cable back until the cable lock reaches the cable gripper/cable tensioner body.
11. Repeat Steps 7-10 for the second cable.
12. While supporting the fixture, place the anchor plate cover over the anchor plate and screw the cable gripper/cable tensioner onto the mounted anchor plate. Repeat for the other side.
13. Check to make sure that the fixture is level.

**ZEPP** pendant  
oxygen **32-632-xx**

OXYGEN LIGHTING ©

**oxygen**

OXYGEN LIGHTING  
201 RAILHEAD RD, FORT WORTH, TX 76106  
TEL. (877) 607-0202 FAX (877) 607-0203  
WWW.OXYGENLIGHTING.COM


**ASSEMBLY INSTRUCTIONS**  
**PAGE 1 of 2**

# ASSEMBLY AND INSTALLATION INSTRUCTIONS

**WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER PRIOR TO INSTALLING OR SERVICING THIS FIXTURE.**

**NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.**

PLEASE READ ENTIRELY THROUGH INSTALLATION BEFORE BEGINNING

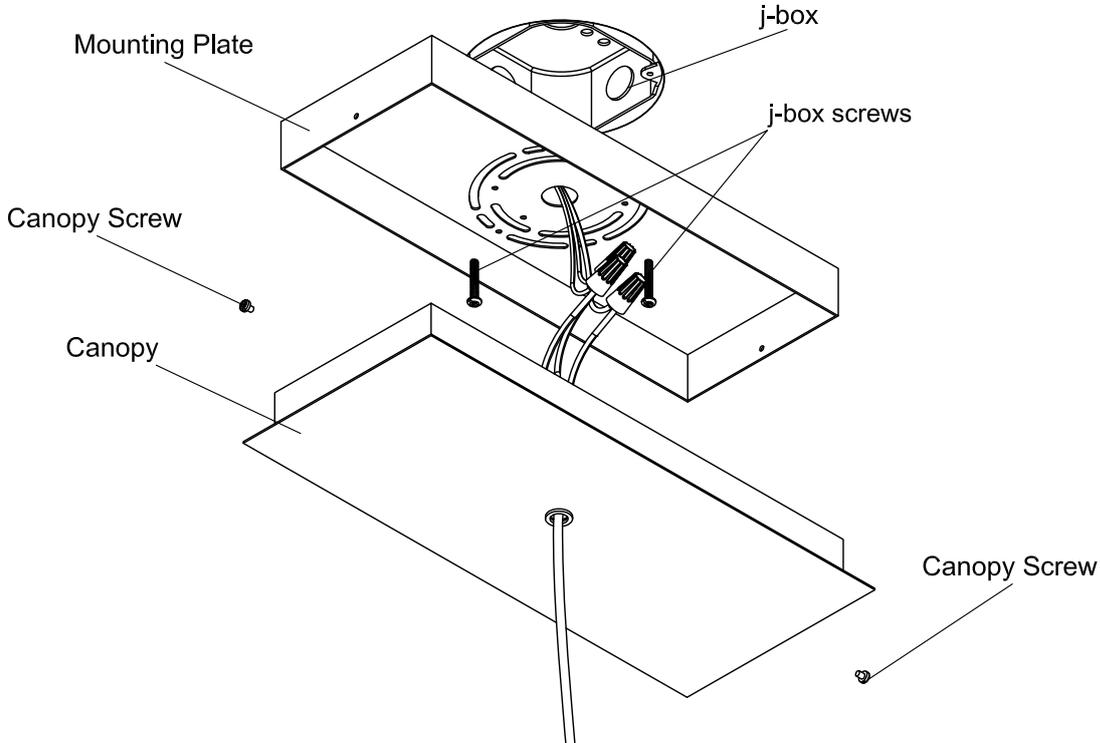

## Installation Steps

14. Install mounting plate to J-box with J-box screws.
  15. Determine amount of cable needed. Cut cable, then guide white wire strainer over cable and tighten.
  16. Make wire connections. Attach ground wire to building ground wire using a wire nut. Connect blue wire to blue wire, and red wire to red wire. Connect hot wire to hot wire, and neutral wire to neutral wire.
- **FOR DIMMING:** If using a dimmer (not included), follow wiring instructions enclosed with dimmer. Double check wiring. Tuck the wire connections neatly into the canopy. Some suggested dimmers below.

This list of dimmers does not imply any guarantee or warranty of compatibility with a particular application. The lack of dimmers on this list does not imply it is not compatible with our drivers.

Due to the high degree of variability when dimming, all applications should be evaluated prior to installation to ensure it meets expectations.

oxygen

Some Suggested Dimmers

0-10V		ELV(Reverse phase)	
Leviton	a-2000	Leviton	Surslide 6615-POW
Leviton	IP710	Lutron	Skylark SELV-300P
Leviton	Renior II(W/0-10v setting)	Lutron	Diva DVELV-300P
Lutron	Diva DDTV	Lutron	Maestro MAELV-600
Lutron	Nova NFTV	Lutron	Nova NTELV-600
Douglas Lighting	WPN-5821/5822	Lutron	Vierti VTELV-600
Hunt Dimming	PS-LED-010-120V		
Hunt Dimming	PS-LED-010-3W-120V		
Hunt Dimming	PS-LED-010-277V		
Hunt Dimming	PS-LED-010-3W-277V		
Wattstopper, Inc.	ADF-120277		

- **FOR NON-DIMMING:** If not using a dimming switch, with wire nuts, cap off purple and gray wires individually. Double check wiring. Tuck the wire connections neatly into canopy.
17. Secure canopy to mounting plate, and install the provided canopy screws.
  18. Double check wiring, and turn power back on at fuse or circuit box.

**ZEPP** pendant  
oxygen **32-632-xx**

OXYGEN LIGHTING ©

**oxygen**

OXYGEN LIGHTING  
201 RAILHEAD RD, FORT WORTH, TX 76106  
TEL. (877) 607-0202 FAX (877) 607-0203  
WWW.OXYGENLIGHTING.COM

**ASSEMBLY INSTRUCTIONS**  
**PAGE 2 of 2**