


Mecca

Mini Basin Mixer

Nero




Lead Free

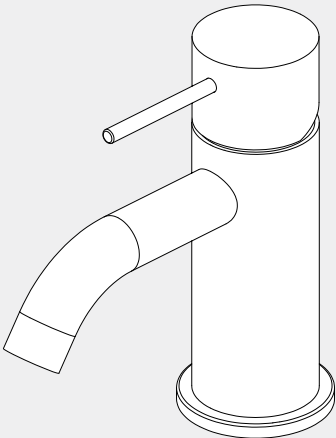

Versions:202506

Drawing

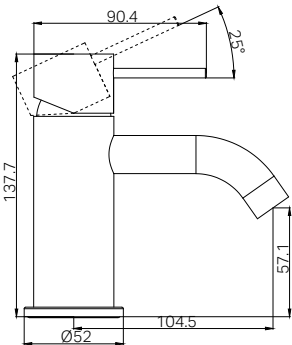

Specifications

Watermark License

WM-060073

Temperature Rating

Min 1 °C - Max 75 °C

Pressure Rating

Min 150 kpa - Max 500 kpa

Finish & SKU

 **Brushed Bronze**
NR221901fBZ

 **Matte Black**
NR221901fMB

 **Chrome**
NR221901fCH

 **Brushed Gold**
NR221901fBG

 **Brushed Nickel**
NR221901fBN

 **Gun Metal**
NR221901fGM

 **Matte White**
NR221901fMW

Packaging Includes

- 1x Mini Basin Mixer
- 2x Flexible Hose
- 1x Installation Kits

*Dimensions are nominal measurements only.


INSTALLATION INSTRUCTIONS


GENERAL INSTRUCTIONS:

- This product must be installed by a licensed plumber. Ensure that the installation complies with the Australian / New Zealand Standard AS/NZS 3500.
- All pipework must be thoroughly flushed prior to the installation of the mixer. In-line filters must be fitted on both hot and cold supplies to prevent foreign particles from damaging the ceramic cartridge.
- All outlets used primarily for personal hygiene must deliver water at a safe temperature in accordance with regional regulations.
- After installation, all connections must be checked for leaks.
- This mixer is not recommended for use in uncontrolled heating systems such as wet-backs or solar heating units unless a suitable tempering valve is fitted.
- If limited water flow is experienced, locate aerator and filter washers and clean away foreign material as required.


MAINTENANCE AND CARE:

- Regularly check the mixer and connections for signs of wear or leaks.
- Clean the tap with mild soapy water to maintain its appearance, avoiding harsh chemicals and abrasive materials that may damage the finish.

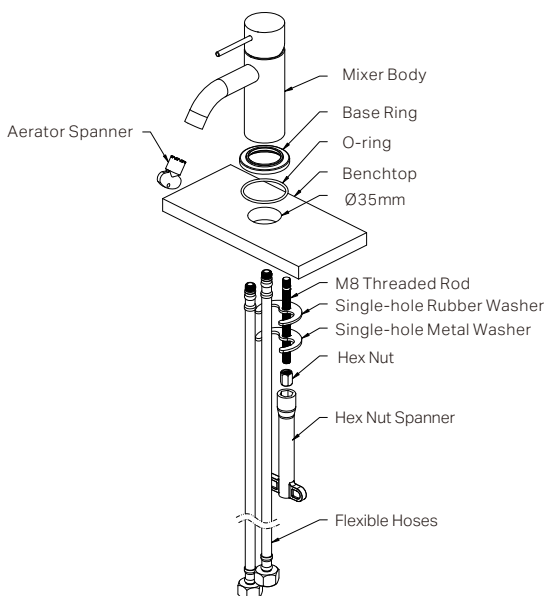


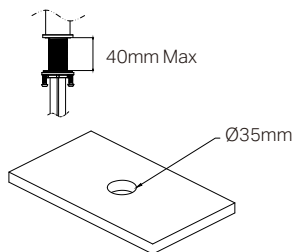

1. Pre-drill or create a hole with a diameter of 35mm at the proper location. Please note that the thickness of the surface should be between 3mm-40mm.

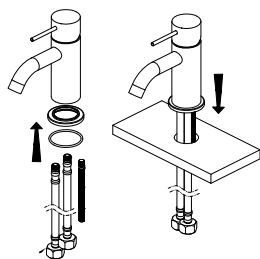

2. Insert the base ring into the main body(ensure the O-ring is seated in the groove at the bottom of the base ring). Pass the flexible hoses and the M8 threaded rod through the hole on the benchtop to the mixer's base, and then tighten.

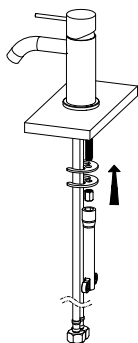

3. Slide the single-hole rubber washer, single-hole metal washer onto the threaded rod, secure them with the M8 hex nut using an spanner. Ensure the main body is securely mounted to the benchtop, and avoid overtightening to prevent damage to the components.

4. Connect the Pex Hose to the corresponding hot and cold water supply valves. Tighten the Female cone nuts by hand(According to Pex hose instruction). Ensuring they are secure yet not overtightened to avoid thread damage.

5. Check all connections for leaks. If any fittings are leaking, shut off the water as necessary to stop the leaks. Contact the supplier for warranty claim. Refer to warranty page.

FINAL INSPECTION:

- Ensure the tap operates smoothly and that there are no leaks at the connections.
- Clean the area and the newly installed tap with a soft cloth to remove any installation residues.

Nero

