


ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER PRIOR TO INSTALLING OR SERVICING THIS FIXTURE.

NOTE: Before installing, consult local electrical codes for wiring and grounding requirements.

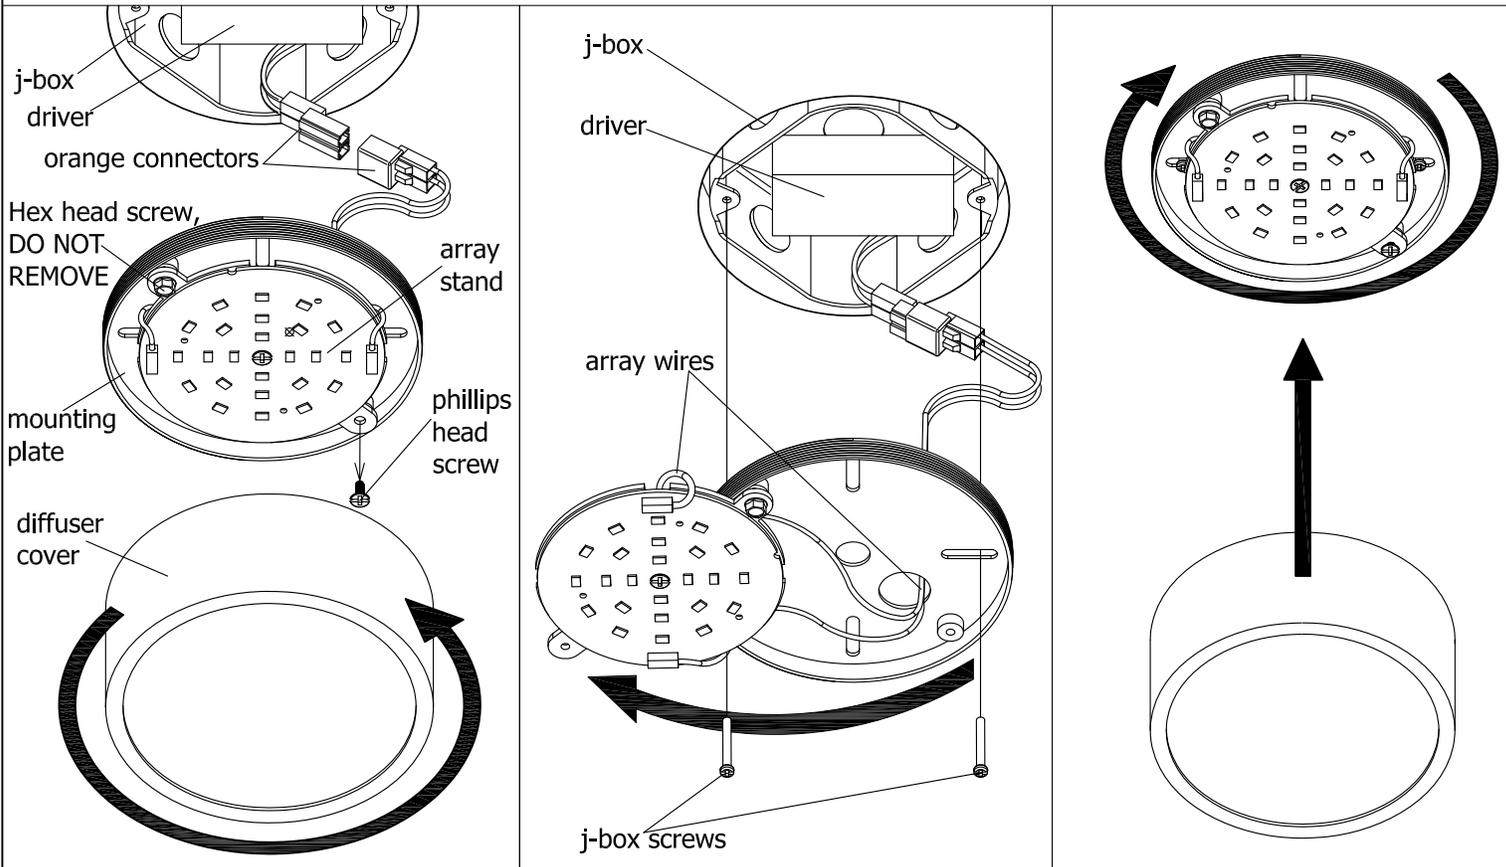

Installation Steps (Peepers shown in illustration)

1. Carefully unpack your new fixture and lay out all the parts on a clean surface. Take care not to lose any parts necessary for installation.
2. Unscrew diffuser cover from mounting plate. Connect orange connectors together from driver and mounting plate.
3. Make wire connections: Attach ground wire to building ground wire using a wire nut.
 - **FOR DIMMING:** If using a dimmer (not included), follow wiring instructions enclosed with dimmer. Double check wiring. Tuck the wire connections neatly into the junction box.
 - **FOR NON-DIMMING:** If not using a dimming switch, with wire nuts, cap off purple and gray wires individually. Wire positive wire with positive wire, negative wire with negative wire. Double check wiring.
4. Remove Phillips head screw from array stand. Do not loosen hex head screw. Swivel array stand to access mounting holes taking care not to pull or remove array wires. Tuck the connections and driver neatly into the junction box before installing mounting plate. Line up the mounting plate holes to the j-box and install j-box screws. Mounting plate should be secure and not move.
5. Carefully swivel array stand back to original position and reinstall screw. Make sure not to crush or disconnect array wires. Replace diffuser cover.
6. Turn power back on at fuse or circuit box.

ZEEPERS surface	PEEPERS surface
120v 3-560-xx	120v 3-600-xx
277v 37-560-xx	277v 37-600-xx

OXYGEN LIGHTING ©

oxygen

OXYGEN LIGHTING
201 RAILHEAD RD, FORT WORTH, TX 76106
TEL. (877) 607-0202 FAX (877) 607-0203
WWW.OXYGENLIGHTING.COM

ASSEMBLY INSTRUCTIONS