



USER MANUAL

Sip Station Mini-Kit for Poultry

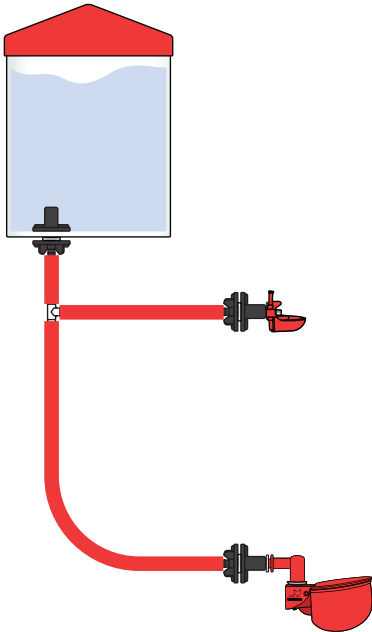



TABLE OF CONTENTS

Package Contents 2

How to Assemble 4

PACKAGE CONTENTS


1x water reservoir

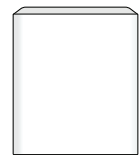

1x water reservoir lid



1x reservoir wire holder

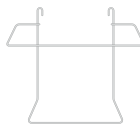

1x mounting bracket with screws



1x universal spring clip




3x tubing adapters




1x barbed T-connector



1x 6ft roll of tubing

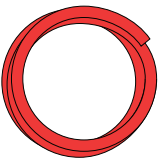

2x auto-fill cups



2x horizontal nipples with dribble dish



HOW TO ASSEMBLE


NOTE

This watering system is a gravity-fed system.

Configure your setup so that your water reservoir is located above your drinker attachments and lay out the tubing so that water can effortlessly flow down to the drinking attachments.


YES

In setups 1 and 2, water is able to flow down the tubing into the drinking attachments.

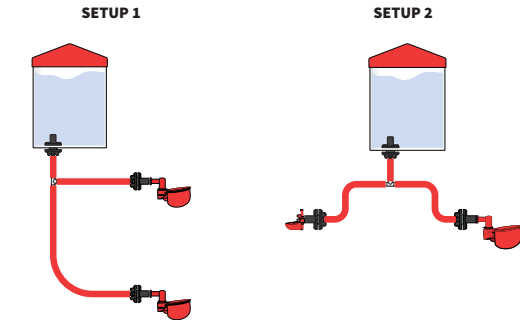


NO


In setups 3 and 4, water cannot flow up the tubing and will therefore be unable to reach the drinking attachments.

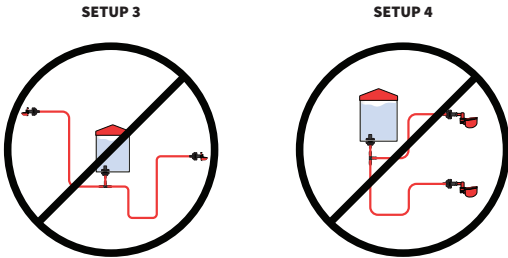

- 1. Install the tubing adapter into the water reservoir. The silicone gasket stays on the outside of the reservoir. Twist until secure.


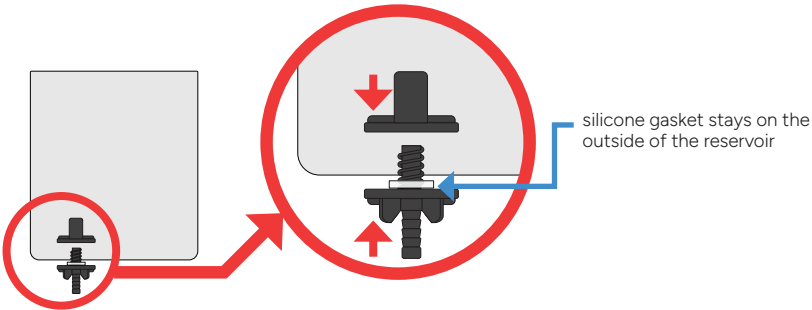


- 2. Place the water reservoir in the reservoir wire holder.

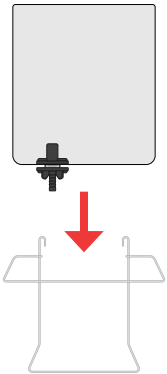


3. Anchor the water reservoir and the wire holder to the cage, hardware cloth, or mount it to your desired location using the included mounting bracket (optional).


Make sure the water reservoir is located higher than the locations of where the drinking attachments will be.

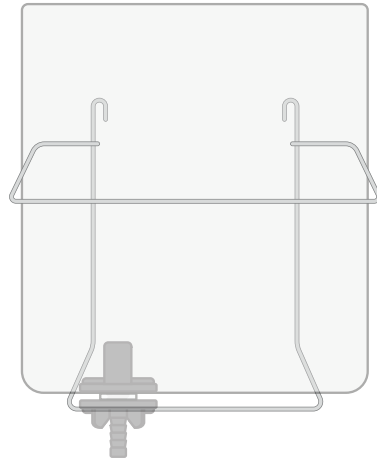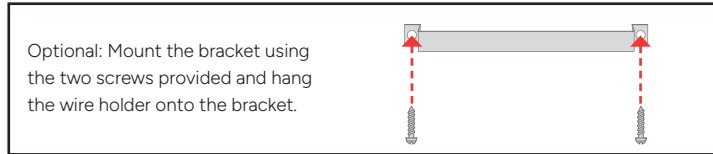


4. Measure and cut tubing to desired length and attach to tubing adapter.

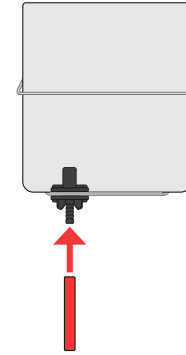

-
- Attach barbed T-connector to tubing.
5. The orientation of the barbed T-connector may vary depending on your setup.



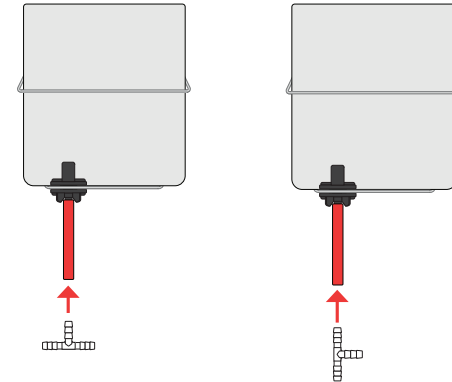


6. Install drinking attachment to tubing adapter.

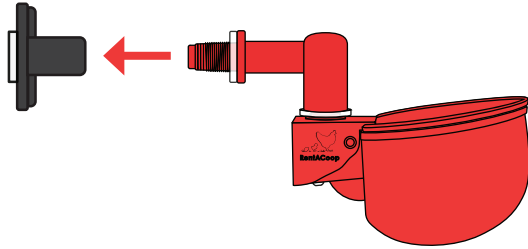


7. Attach drinking attachment with tubing adapter to cage setup by screwing onto cage or hardware cloth.


If using auto-fill cups, the top of the cups should be shoulder-length with your animal.
If using horizontal nipple, the nipple should be eye-level with your animal.
See page 9 for more details.

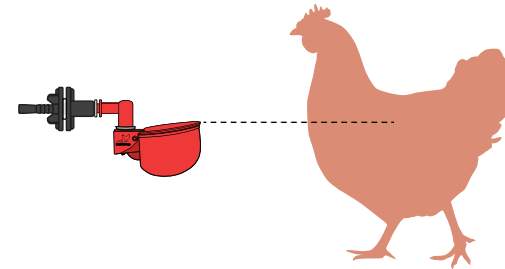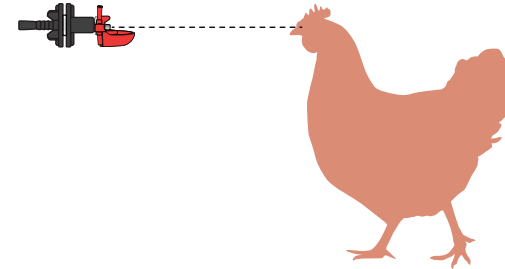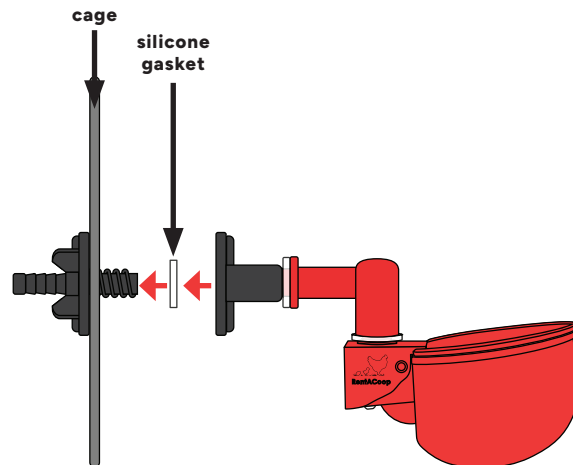

8. Measure and cut two pieces of tubing to desired lengths and attach to remaining ends of the barbed T-connector and the drinking attachments.

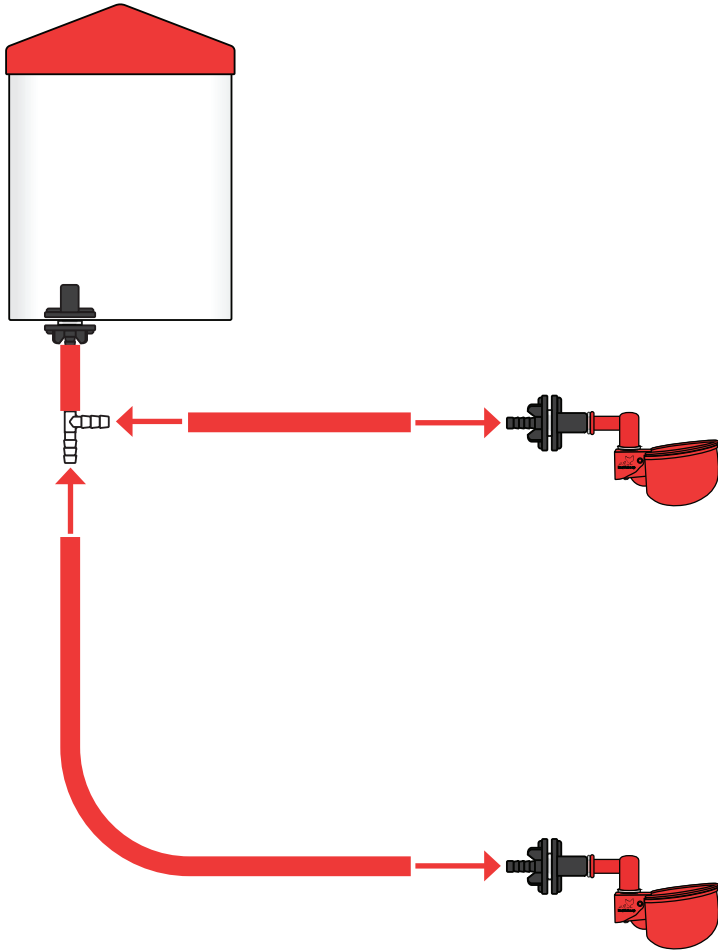

9. Fill water reservoir with water.

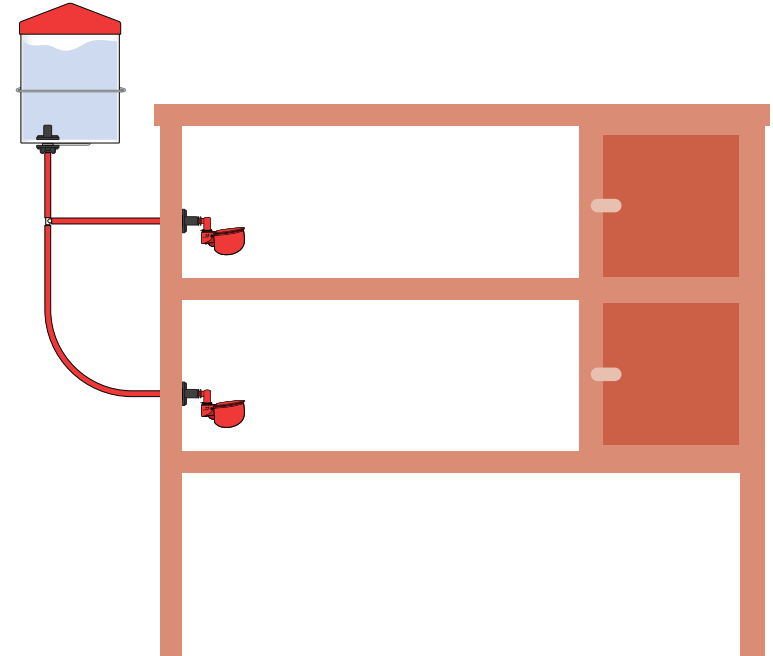



RentACoop®

QUESTIONS?

CONTACT OUR
EGG - S P E R T S

info@rentacoop.com

1 800-642-3571

M-F 9-5 EST



@rentacoop
#rentacoop