


USER MANUAL

Sip Station

Watering System for Small Animals

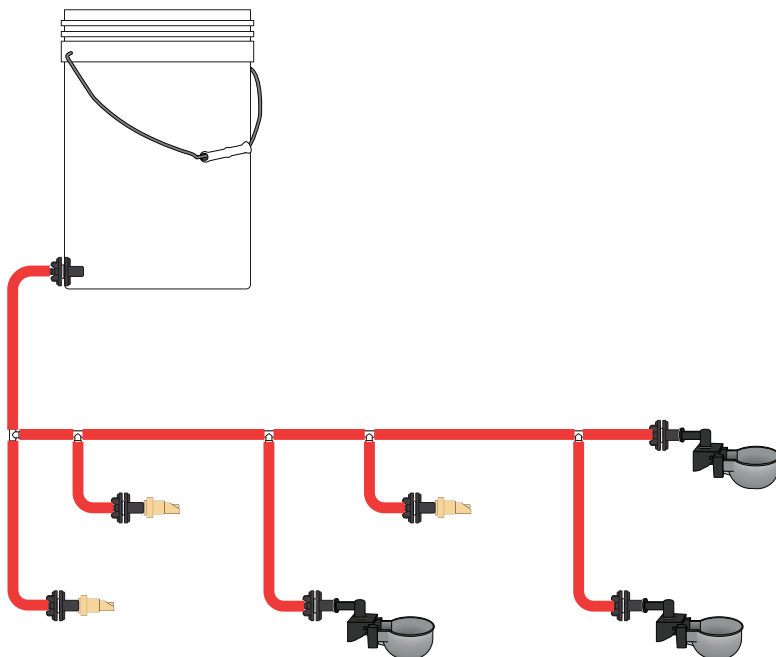

DIY
series

TABLE OF CONTENTS

Package Contents 3

How to Assemble 4

WHAT YOU WILL NEED:

- drill
- measuring tape
- tool for cutting insulated tubing
- appropriate safety equipment



PACKAGE CONTENTS

1x 11mm drill bit




7x tubing adapters




6x barbed T-connector



1x 20ft roll of tubing

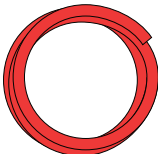

6x metal auto-fill cups

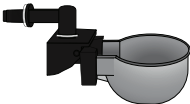

6x brass nozzles



HOW TO ASSEMBLE


NOTE

This watering system is a gravity-fed system.

Configure your setup so that your water reservoir is located above your drinker attachments and lay out the tubing so that water can effortlessly flow down to the drinking attachments.


YES

In setups 1 and 2, water is able to flow down the tubing into the drinking attachments.

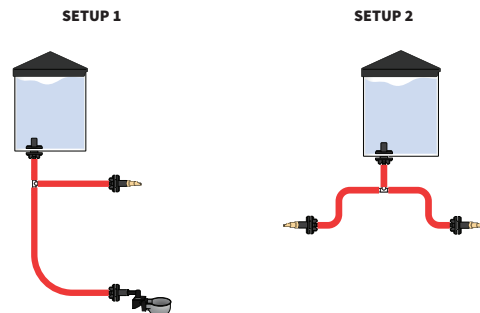


NO


In setups 3 and 4, water cannot flow up the tubing and will therefore be unable to reach the drinking attachments.

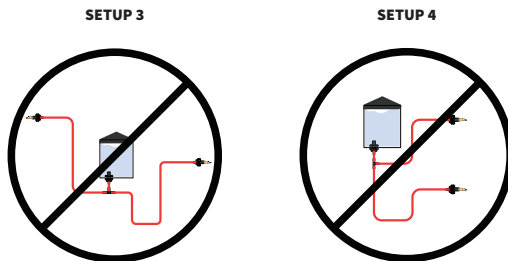

1. Drill a hole into your water reservoir using the drill bit provided. Recommended locations are at the very bottom of your container or the lowest level possible.

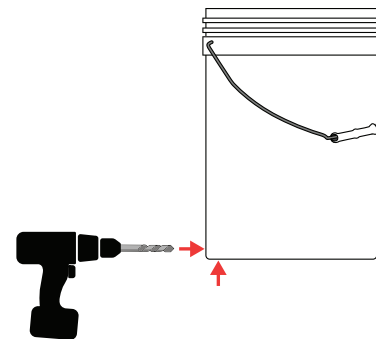


2. Install the tubing adapter into the water reservoir. The silicone gasket stays on the outside of the reservoir. Twist until secure.

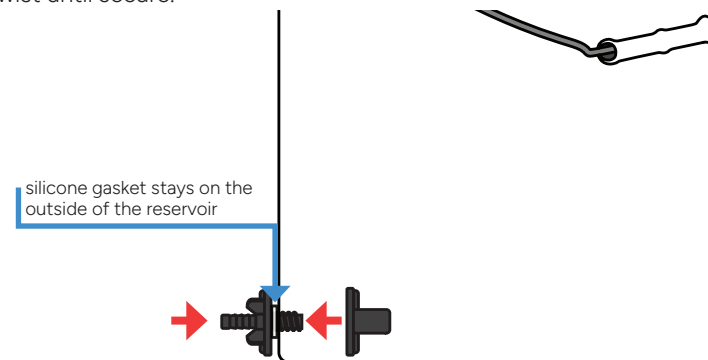


3. Configure the layout of your watering system and measure each piece of tubing needed. Safely cut tubing to desired lengths.


To purchase additional tubing, tubing adapters and barbed t-connectors, scan the QR code located on page 11.

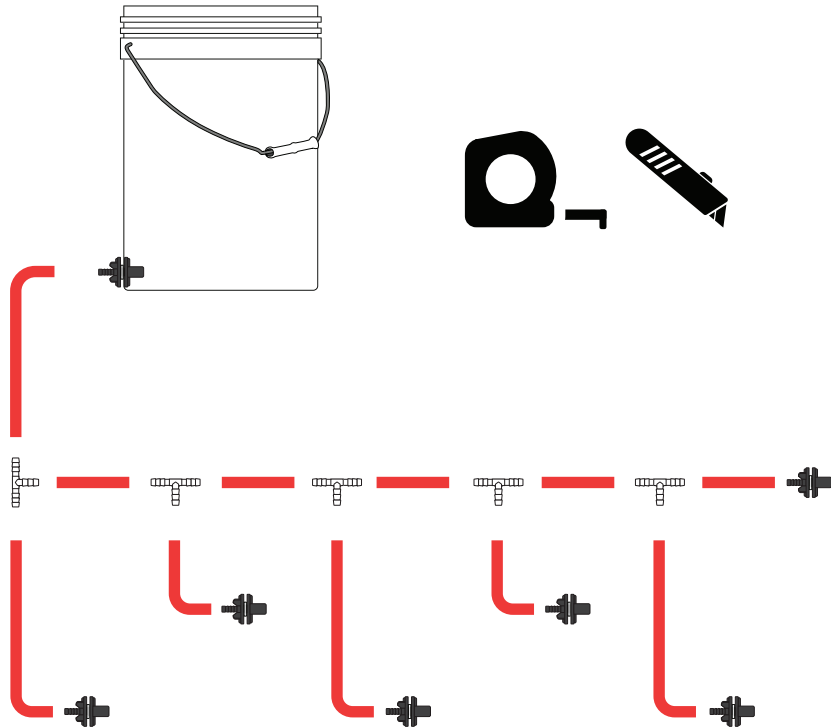

4. Attach tubing to the tubing adapter that is installed on your water reservoir and connect to remaining barbed t-connectors. This configuration will vary depending on your setup.



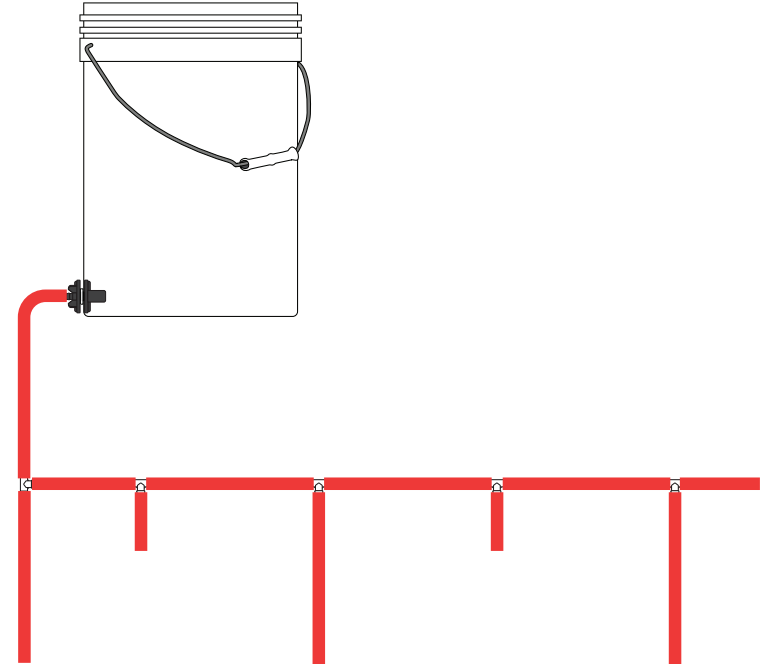


6. Install drinking attachment to tubing adapter.

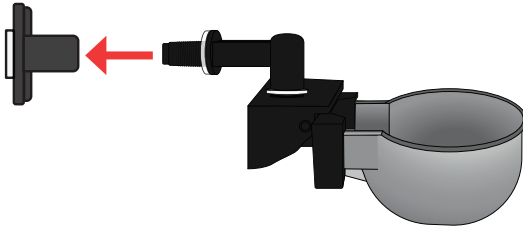


7. Attach drinking attachment with tubing adapter to cage setup by screwing onto cage or hardware cloth.

If using auto-fill cups, the top of the cups should be shoulder-length with your animal.
If using brass nozzle, the nozzle should be eye-level with your animal.
If using horizontal nipple, the nipple should be eye-level with your animal.
See page 9 for more details.

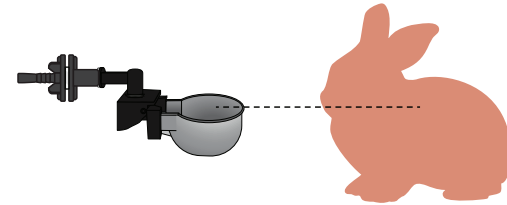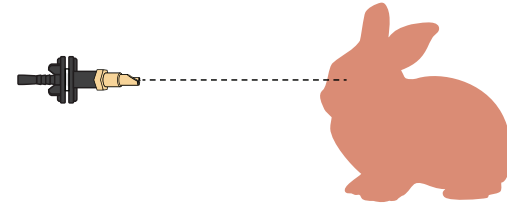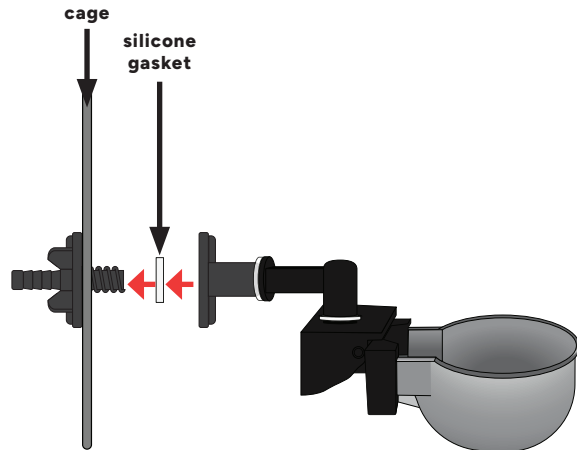


8. Attach tubing to remaining ends of the the adapters with drinking attachments..

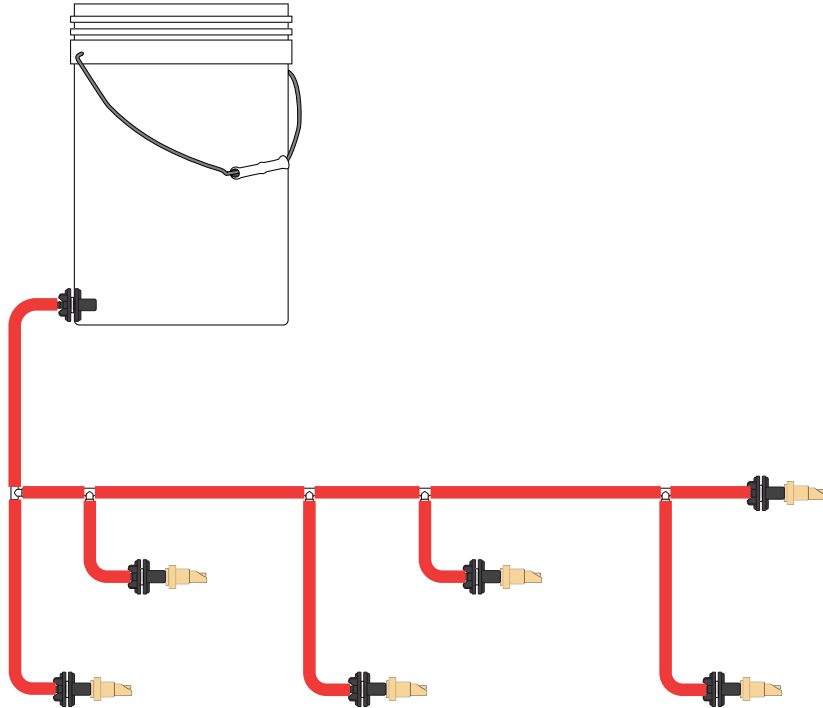

9. Fill water reservoir with water.

SCAN QR CODE

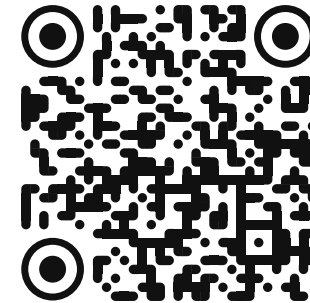

- EXTRA PARTS
- MORE INFORMATION



@rentacoop
#rentacoop